

Toilet seat Subway

Model

9955 S1 Subway toilet seat with Soft Closing and Quick Release, incl. 9220 55 61 universal toggle hinge with Quick Release

Product Description

Subway toilet seat in Wrap Over design made of colour ingrained duroplast with hinge in stainless steel and plastic

- incl. universal toggle hinge with Quick Release in stainless steel
- centre distance: 140-220 mm
- load of ring seat: 240 kg
- 10 year guarantee



01 White (Alpin)

09 Pergamon

R2 Star White

R5 Manhattan S3 Edelweiß

Hinge Finish

61 Stainless steel

Spare Parts

A) 9220 55 61 Universal toggle hinge with Quick Release

B) 9222 05 00 Spare parts cover caps for universal toggle hinge


C) 9218 96 00 Spare part for toggle hinge


D) 9222 04 00 Soft Closing packet


E) 9220 81 00 Buffers for seat and cover

Cleaning Instructions

Use a mild soap solution. Seat and hinge should not be left damp, but be dried with a soft cloth. When using abrasive, corrosive or chlorine based cleaners for the bowl, avoid contact with seat and hinge as it may lead to damages or flash rust. Therefore, when cleaning the bowl, make sure that seat and cover are in an upright position until all the cleaner has been flushed away

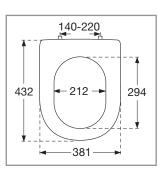


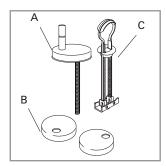

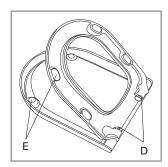



Instruction manual

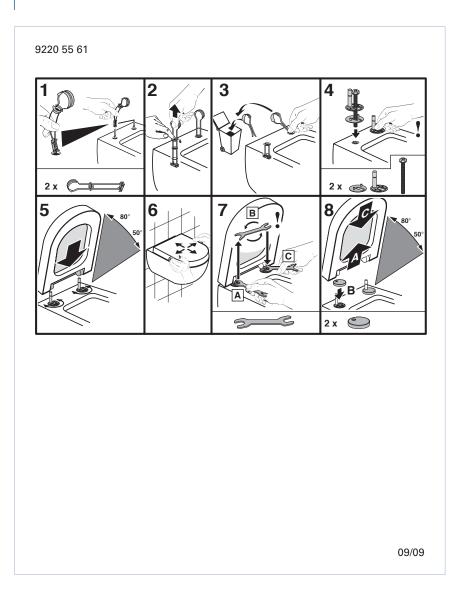

Click here for video

Material Description

TOILET SEAT: The material is colour ingrained duroplast (UF A 10 = urea formaldehyde) that contains no environmentally hazardous substances. The body consists of approx. 50% urea (NH2CONH2), approx. 25% cellulose and approx. 25% formaldehyde (HCHO), as well as small amounts of various fillers and additives.

BUFFERS: EVA (copolymer made of ethylene and vinyl acetate).

DAMPER KIT: Hydraulic damper with stainless steel damper casing and plastic parts. Damper liquid: Anti-friction liquid.

MOUNT/HINGE: Stainless steel.

Guarantee

The guarantee includes faults or defects in the material of our products within a periode of 10 years. Products subject to minor technical modifications and design deviations E. & O.E.

